



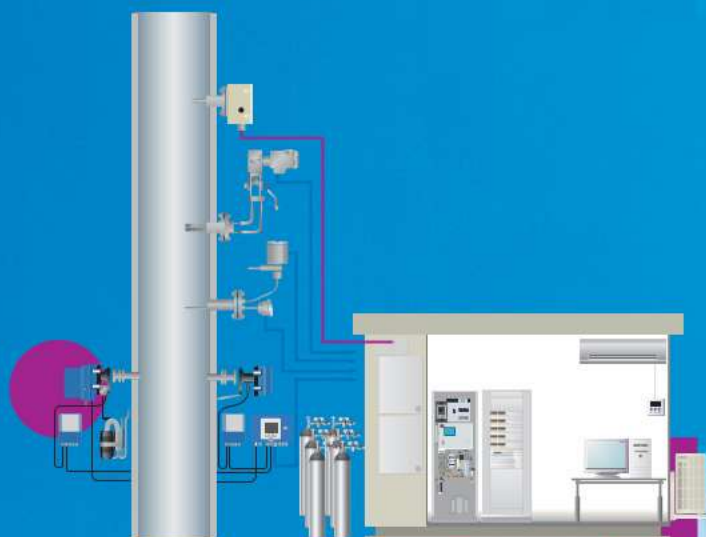

## CEMS

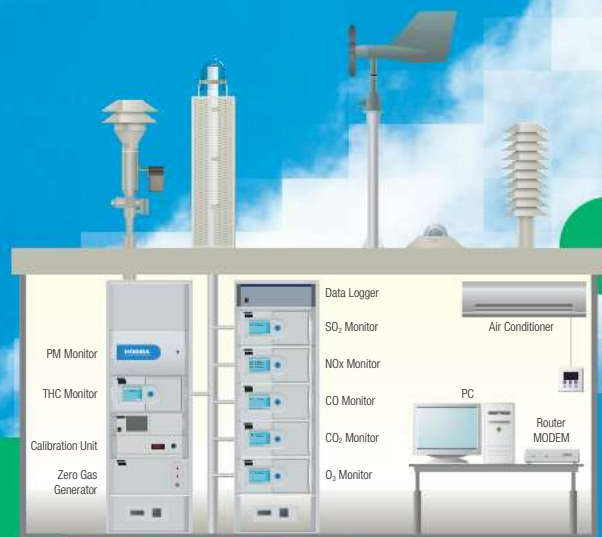

## AQMS

### Analytical System Integration

## PROCESS



## WQMS



## Air Pollution Analyzer

### AP-370 series

NO<sub>x</sub>, SO<sub>2</sub>, CO, CO<sub>2</sub>, O<sub>3</sub>, H<sub>2</sub>S, NH<sub>3</sub>, THC, NMTHC, CH<sub>4</sub>, NMVOC

NO<sub>x</sub>: 0-0.1/0.2/0.5/1.0 ppm  
 SO<sub>2</sub>: 0-0.05/0.1/0.2/0.5 ppm  
 CO: 0-5/10/20/50 ppm  
 CO<sub>2</sub>: 0-500/1000 ppm  
 O<sub>3</sub>: 0-0.1/0.2/0.5/1.0 ppm  
 H<sub>2</sub>S: 0-0.05/0.1/0.2/0.5 ppm  
 NH<sub>3</sub>: 0-0.1/0.2/0.5/1.0 ppm  
 THC, NMTHC, CH<sub>4</sub>: 0-5/10/20/50 ppmC  
 NMVOC: 0-2000 ppm

\* Other ranges are also available. Please consult HORIBA.

- Long term stable drift by Cross Flow Modulation technology.
- Automatic calibration function enables setting of start time and the interval to reduce operation.
- Multi-range function automatically switches the range to the best suited, depending on measured gas concentration.

CE, TÜV, FCC, MCERTS, GOST, CPA, KC, JAPAN etc



## Continuous Particulate Monitor with X-ray Fluorescence

### PX-375

Particulate Matter (PM10/PM2.5/TSP)  
 Particulate mass concentration and element concentration

0-200/500/1000 µg/m<sup>3</sup>

\* Other ranges are also available. Please consult HORIBA.

- Continuous hourly analysis of PM mass and the elemental concentration by a single unit directly in the field.
- Adoption of world proven technologies: X-ray fluorescence & Beta-ray attenuation, advanced analysis for prevention of air pollution.
- Remote Operation via internet connection enables user to check status and acquire data without going on site.

CE, FCC, KC etc



- Measurement items
- Range
- Features
- Certificates & Compliance

## Beta-Ray Attenuation type Dust Analyzer

### APDA-371

PM2.5, PM10, TSP

Standard: 0-1000 µg/m<sup>3</sup>

\* Other ranges are also available. Please consult HORIBA.

- Long term unattended remote operation of up to 60 days between site visit.
- Hourly filter advances minimize effects of volatile compounds.
- Integrated data logger allows the connection of up to six additional meters.

CE, TÜV, US EPA etc

## Light Scattering type Dust Analyzer

### APDA-372

PM1, PM2.5, PM10, TSP

Particle size: 0.18 - 100 µm

Number: 1 - 20000 particle/cm<sup>3</sup>

Mass: <0 - 1500 µg/m<sup>3</sup>

\* Other ranges are also available. Please consult HORIBA.

- Continuous real-time measurement of PM values simultaneously with additional information through particle number concentration.
- Time resolution adjustable from 1 sec up to 24 hr.
- LED light source with high stability, long lifetime and durability.

CE, TÜV etc



## Multi Gas Calibrator

### APMC-370

NO, SO<sub>2</sub>, CO, CO<sub>2</sub>, O<sub>3</sub>, H<sub>2</sub>S, NH<sub>3</sub>

\* Other parameters are also available. Please consult HORIBA.

- Dynamic generation of span gas by dilution system. Integrated zero gas.
- Multipoint calibration: 8 individually adjustable cycles, each with up to 20 points.
- Precision of span gas concentration: better than 1%, Linearity of span gas.

CE etc

Related  
Products

AMC(Airborne Mole  
Data Acquisition & M

## On-line Industrial Water Quality Analyzer

### H-1 series

pH, ORP, Conductivity, Resistivity, Residual chlorine, Dissolved oxygen, Turbidity, MLSS, Fluoride ion, NH<sub>4</sub>-N

pH: 0 to 14 pH ORP: -2000 to 2000 mV

Conductivity: 0.0 to 200.0 mS/cm 0.00 to 20.00, 0 to 2000 µS/cm

Resistivity: 0.000 to 2.000 MΩ · cm 0.00 to 20.00 kΩ · m Residual chlorine: 0 to 3 mg/L

Dissolved oxygen: 0 to 20 mg/L

Turbidity: 0 to 2 degree(min.), 0 to 4000 degree(max)

MLSS: 0 to 2000 mg/L

Fluoride ion: 0 to 10000 mg/L

NH<sub>4</sub>-N: 0 to 1000 mg/L

\* Other ranges are also available. Please consult HORIBA.

- H-1 series comprehensively suits all kinds of water applications, ranging from purified water monitoring to waste water monitoring.
- Lineup with focus on robustness, functionality and maintainability that responds to harsh conditions at the installation sites.
- Essential functions for water analyzer management such as noise resistance, auto calibration, self-diagnosis, and full interface.

CE, FCC, KC etc



## Panel Types Water Quality Measuring Instruments

### 48/96 series

pH/ORP/Conductivity/Resistivity/Dissolved Oxygen/Residual Chlorine

Please consult HORIBA.

- Well-developed status indicator icons.
- Setting with the front-panel keys.
- Utilization of lead-free solder.

CE, FCC, KC etc



## Organic Pollutant Monitor

### OPSA-150

UV absorbance, VIS absorbance, Converted COD level, Converted BOD level, Converted TURB level

UV absorbance, VIS absorbance

0-0.1 Abs to 0-5.0 Abs (Can be set 0.1 Abs increments)

- HORIBA's unique rotary cell length modulation sensor ensures no zero-drift as well as covers a wide measurement range from as low as 0 to 0.1 Abs, up to 0 to 5.0 Abs, while providing a minimum resolution of 0.0001 Abs.
- Sample error alarm comes as a standard feature.
- OPSA-150 offers data storage to save up to one year of data and continuous cell wiper system which greatly reduces maintenance.

CE, FCC, KC etc



- Measurement items
- Range
- Features
- Certificates & Compliance

Related  
Products

Automatic Calib  
Continuous Oil F

## Automatic COD Monitor

### CODA-500

COD concentration in water

0-20 mg/L

0-30, 40, 50, 100, 200, 500, 1000 mg/L

\* Other ranges are also available. Please consult HORIBA.

- Small amount of reagent consumption, innovative reagent delivery system, low running cost.
- 2 measurement methods for COD.
- Direct heating method required.

CE, FCC, KC etc

## Automatic Total Nitrogen Monitor

### TPNA-500

Total Nitrogen and phosphorus

Total nitrogen: 0-2, 5, 10, 20, 50 mg/L

Total phosphorus: 0-0.5, 1, 2, 5 mg/L

\* Other ranges are also available. Please consult HORIBA.

- Adoption of meniscus measurement, automatic washing functions, lengthening the maintenance interval.
- Reduction in power consumption, water usage and waste water.
- HORIBA's state-of-the-art technology delivers high reliability.

CE, FCC, KC etc

sits.  
orological sensors.



generator or external zero gas generator (ZNV-7) is also available.  
calibration points and each calibration cycle runs also automatically.  
s concentration: better than 1%.

cular Contamination) Analysis : **AP-370 series**  
Management Software : **IDA-2000, IDA-ZRW**

## Air Quality Monitoring System

# AQMS

HORIBA has more than 50 years experience providing ambient monitoring solutions, recognized around the world. HORIBA has supplied over 15,000 units with the major share in many regions. The monitoring station is tailor-made according to the customer's request. HORIBA can provide several types of stations, cabinets, calibration equipment and more to meet your challenging monitoring requirements.



onitor

000, 2000 mg/L (1-dilution type)  
se consult HORIBA.  
sumption (0.5-2 ml/measurement) and  
ervice provides easy handling and low  
different sample types and applications.  
es no cooling water.



## Nitrogen/Phosphorus Monitoring System

s  
50, 100, 200, 500, 1000 mgN/L  
5, 10, 20, 50, 100, 250 mgP/L  
se consult HORIBA.  
ement method and enhanced  
(option) contributes to the  
e cycle.  
tion by approx. 30%, with pure  
generated reduced to 1/2.  
hology and measurement  
ity.



ration/Cleaning Industrial pH Analyzer : **AH-151**  
ilm Analyzer : **LO-300**

## Water Quality Monitoring System

# WQMS

HORIBA produced the first national pH meter in 1950 in Japan. Since then, we have been producing a variety of water quality analyzers and systems which are designed according to the customer's request. HORIBA has unrivaled knowledge and expertise to provide a suitable system to meet your regulation requirement. To date, approximately 200 WQMS have been installed in Korea alone.



HORIBA



# CEMS

## Continuous Emission Monitoring System

HORIBA has been supplying stack gas analyzers for more than 50 years and have invented several analyzer technologies and sampling systems. HORIBA has supplied more than 100,000 units so far around the world and has the largest market share in Japan for power plant applications\*. We can supply systems that comply with regulations in various regions such as Europe, US, China and Korea with our wealth of knowledge and experience.

\*As of 2014, based on our company's research



### Stack Gas Analyzer

#### ENDA-5000 series

- NO<sub>x</sub>, SO<sub>2</sub>, CO<sub>2</sub>, CO, O<sub>2</sub>
- NO<sub>x</sub>: 0-200 to 5000 ppm CO: 0-200 to 5000 ppm
- SO<sub>2</sub>: 0-200 to 5000 ppm O<sub>2</sub>: 0-10 to 25 vol%
- CO<sub>2</sub>: 0-5 to 25 vol%
- \* It can be set to dual ranges. Range ratio shall be within factor 10 as standard.
- \* Other ranges are also available. Please consult HORIBA.
- Cross Flow Modulation type NDIR stabilizes operation with no optical adjustment and zero drift to give longer life time.
- Integrated analyzer with promised performance sampling unit established from more than 50 years experience in this field.
- Special magneto-pneumatic O<sub>2</sub> detector providing non carrier gas and non direct contact with sample gas provides less running cost and longer life time.

CE, TÜV, FCC, CPA, CEP (China), KC, JAPAN etc

### Stack Gas Analyzer

#### ENDA-7000 series

- NO<sub>x</sub>, SO<sub>2</sub>, CO, CO<sub>2</sub>, O<sub>2</sub>, NH<sub>3</sub>
- NO<sub>x</sub>: 0-10 to 5000 ppm CO<sub>2</sub>: 0-5 to 50 vol%
- SO<sub>2</sub>: 0-10 to 5000 ppm O<sub>2</sub>: 0-5 to 25 vol%
- CO: 0-50 to 5000 ppm NH<sub>3</sub>: 0-10 to 100 ppm
- \* It can be set to dual ranges. Range ratio shall be within factor 10 as standard.
- \* Other ranges are also available. Please consult HORIBA.
- Reliable, accurate and sensitive range measurement with accepted methods including Cross Flow Modulation type - NDIR, Chemiluminescence, Ultraviolet, and Magneto-pneumatic technology.
- 6 components can be measured simultaneously with multiple detector in a single analyzer.
- Easy to operate the test for US EPA such as CGA, Linearity, RATA etc with the integrated software's.

CE, FCC, US EPA etc

Related Products

Dilution CEMS : **AP-370 series**  
Multi-Component Gas Analyzer : **V**

# PROCESS

## Process Analyzer System

HORIBA's facility in Texas, United States has an advantage of process analysis. We obtained the system integration facility in Houston USA which was previously well known as PAAL. We can offer a total package such as system design, engineering, application development, and on-site maintenance services. We are able to provide process analytical systems which not only use HORIBA's analyzers but also other brand's analyzers as per the customer's requirements.



### Multi-Component Gas Analyzer

#### VA-5000 series

- CO, CO<sub>2</sub>, NO<sub>x</sub>, SO<sub>2</sub>, CH<sub>4</sub>, N<sub>2</sub>O, NH<sub>3</sub>, O<sub>2</sub>
- CO: 0-50 to 100 vol%
- CO<sub>2</sub>: 0-50 to 100 vol%
- NO<sub>x</sub>: 0-20 to 0-5000 ppm
- SO<sub>2</sub>: 0-100 to 10 vol%
- CH<sub>4</sub>: 0-200 to 100 vol%
- N<sub>2</sub>O: 0-100 to 5000 ppm
- NH<sub>3</sub>: 0-100 to 0-1000 ppm
- O<sub>2</sub>: 0-5 to 100 vol% (MPA and Paramagnetic which is only available in Europe)
- 0-5 to 25 vol% (Galvanic and Zirconia)
- \* It can be set 5 ranges. Range ratio shall be within factor 10 as standard.
- \* Other ranges are also available. Please consult HORIBA.
- A single analyzer can contain three small sensor modules out of more than seven different gases to provide many combinations of measurement.
- Multiple gas components with wide selection of ranges (from ppm to %) assure high precision and flexibility for many applications.
- Capability of combining with other system utilizes any measurement in variety of industries.

CE, FCC, US EPA, CPA, KC, JAPAN etc



Related Products

Process Gas Chromatograph : **OTH**  
Any process analyzer can be integr



## Stack Gas Analyzer (Special model with CFM technology for System Integrator)

### GI-700 series

NO<sub>x</sub>, SO<sub>2</sub>, CO, CO<sub>2</sub>, O<sub>2</sub>, NH<sub>3</sub>

NO<sub>x</sub>: 0-10 to 5000 ppm CO<sub>2</sub>: 0-5 to 25 vol%  
SO<sub>2</sub>: 0-10 to 5000 ppm O<sub>2</sub>: 0-10 to 25 vol%  
CO: 0-50 to 5000 ppm NH<sub>3</sub>: 0- 10 to 100 ppm

\* It can be set to dual ranges. Range ratio shall be within factor 10 as standard.

\* Other ranges are also available. Please consult HORIBA.

- Reliable, accurate and sensitive range measurement with accepted methods including Cross Flow Modulation type - NDIR, Chemiluminescence, Ultraviolet, and Magneto-pneumatic technology.
- 6 components can be measured simultaneously with multiple detectors in a single analyzer.
- Capability of combining with other system utilizes combustion measurement in variety of industries.

CE, FCC, US EPA etc



## Stack Gas Dust & Flow Analyzer

Dust, Opacity

Gas velocity, Volume flow\*

\* Please consult HORIBA for gas velocity and volume flow.

Dust: 0- 80 to 4,000 mg/m<sup>3</sup>

Opacity: 0-100%

\* Other ranges are also available. Please consult HORIBA.

- Automatic calibration function to reduce operation work load
- Certified performance analyzer in the world.

CE, TÜV, US EPA etc



## De-NO<sub>x</sub> Process Gas Analyzer

### ENDA-C9000

NH<sub>3</sub>, NO<sub>x</sub>, O<sub>2</sub>

NH<sub>3</sub>: 0-20 to 100 ppm

NO<sub>x</sub>: 0-20 to 100 ppm

O<sub>2</sub>: 0-5 to 25 vol%

\* It can be set to dual ranges. Range ratio shall be within factor 10 as standard.

\* Other ranges are also available. Please consult HORIBA.

- Accurate measurement with sensitive range for NH<sub>3</sub>.
- Zero drift free Chemiluminescence detector (NH<sub>3</sub>/NO<sub>x</sub>) and Magneto-pneumatic detector (O<sub>2</sub>)
- Various useful functions such as hour meter, data logger, or trend graphs enhance maintenance performance

JAPAN etc



■ Measurement items

■ Range

■ Features

■ Certificates & Compliance

## GA-5000 series

## Trace Gas Analyzer

### GA-370

CO, CO<sub>2</sub>, CH<sub>4</sub>, N<sub>2</sub>O

0-1/2/5/10 ppm

\* It can be set 4 ranges. Range ratio shall be within factor 10 as standard.

\* Other ranges are also available. Please consult HORIBA.

- Measures impurities in bulk gas used in semiconductor and other high-purity gases used in clean rooms, medical facilities and manufacturing processes.
- Assured minimum detection sensitivity 10 ppb provides high precise measurement values.
- All metal tubing employed internally to prevent dirt and to enhance safety in handling H<sub>2</sub> and O<sub>2</sub> gas.

CE, FCC, KC



## Tunable Laser Hydrogen Chloride Analyzer

### TX-100

HCl, H<sub>2</sub>O

HCl: 0-50 to 500 ppm

H<sub>2</sub>O: 0-50 vol%

- Laser analyzer requires non-sampling which enables direct measurement and quick response.
- Probe type optical system saves installation cost and maintenance cost.
- HORIBA's original calibration mechanism allows analyzer to calibrate without any disruption to the facility's operations.

CE, FCC, KC



## Explosion-proof Gas Analyzer

### 51 series (EIA-51d/p, TIA-51d/p, TCA-51d/p, MPA-51d/p, PMA-51d)

CO, CO<sub>2</sub>, CH<sub>4</sub> etc (EIA, TIA)

H<sub>2</sub> (TCA)

O<sub>2</sub> (MPA, PMA)

EIA: 0-0.11 to 100 vol%

TIA: 0-50 to 2000 ppm

TCA: 0-10 to 100 vol%

MPA/PMA: 0-5 to 25 vol%

\* It can be set to multiple ranges. Range ratio shall be within factor 10 as standard.

\* Other ranges are also available. Please consult HORIBA.

- Hydrogen explosion proof (IIB+H<sub>2</sub>), IEC60079 compatible.
- Self diagnosis and daily management function.
- Design features high visible LED light indicating operation status for instant recognition.

CE, FCC, EXNEPSI (China), JAPAN (Explosion proof) etc



■ Measurement items

■ Range

■ Features

■ Certificates & Compliance

## er brand

ated in the system

## In Situ Oxygen Monitor

### NZ-5000

O<sub>2</sub>

0-25vol%, others on request

- Continuous measurement of O<sub>2</sub> in stack gas with deviation of only 0.2% from the measured value.
- Electronically monitored pneumatic unit for reference air and calibration gas. (optional)
- Explosion-proof type is also available.


CE, TÜV etc




# CEMS

Continuous Emission Monitoring System

Sample measurement points of a general small/medium sized power facility with HORIBA analyzers

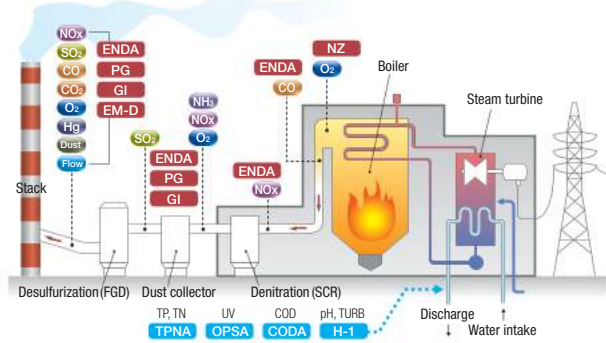

Required parameters by law are measured continuously at a stack and reported to the government by the Continuous Emission Monitoring System (CEMS). De-NOx process (SCR) needs to monitor NOx and NH<sub>3</sub>, and De-SOx (FGD) process needs to monitor SO<sub>2</sub> to optimize the process operation.

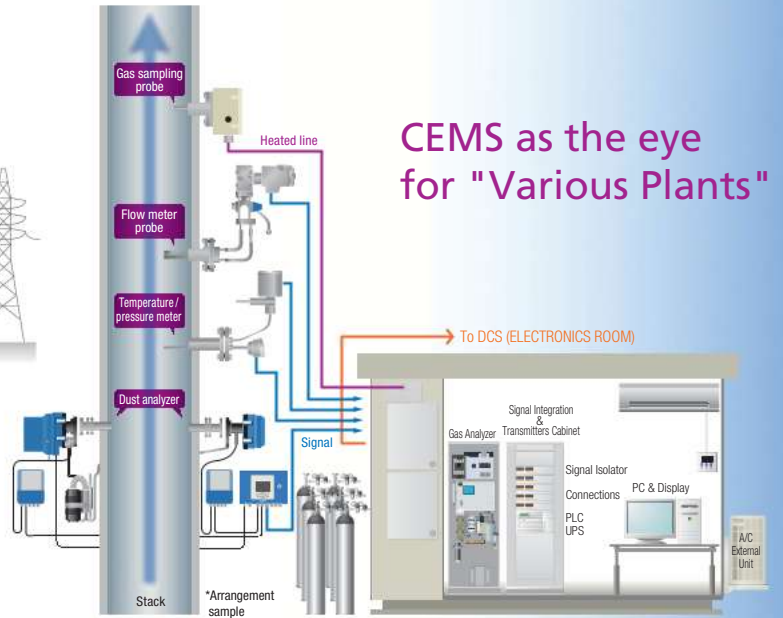

CEMS as the eye for "Various Plants"

## Main Products


|                  |                   |               |
|------------------|-------------------|---------------|
| ENDA-5000 series | GI-700 series     | PG-300 series |
| ENDA-7000 series | ENDA-C9000 series |               |

## Overview

The Continuous Emission Monitoring System (CEMS) is a facility to measure flow, dust, concentration of air pollutants (such as SO<sub>2</sub>, NOx, CO etc), and other parameters according to requirements. Required parameters depend on the type of stationary source.

# PROCESS


Process Analyzer System

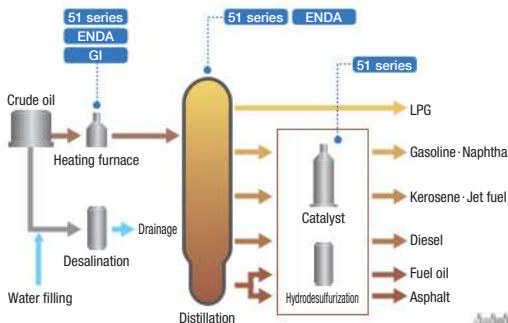

The example of sample measurement point of refinery plant with HORIBA analyzers

In an oil refinery, the crude oil will be converted to final products (Gasoline, Naphtha, etc.) through several processes such as distilling, cracking etc. HORIBA analyzers are utilized to optimize the process and increase production efficiency.

The system as the facilitator to optimize "Industrial Process"

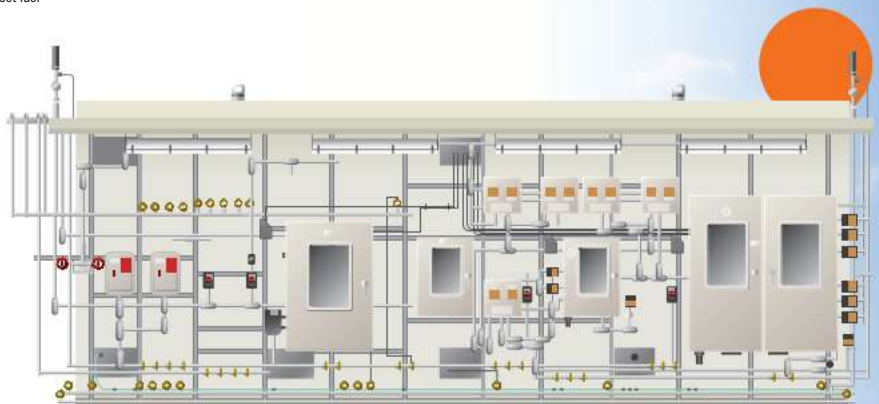

## Main Products



|                |           |        |
|----------------|-----------|--------|
| VA-5000 series | 51 series | TX-100 |
| GA-370         | NZ-5000   |        |

## Overview

Process Analyzer System is a facility to measure necessary parameters such as hydrocarbons to help optimize the manufacturing process. The analyzer is chosen that best meets the customer requirements.



## AQMS as the doctor for "Human Health"

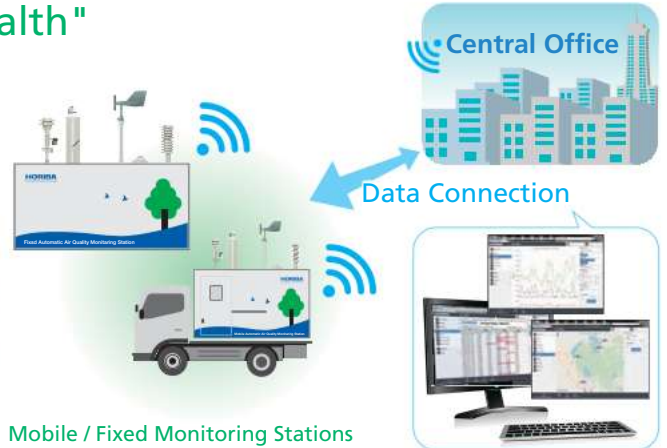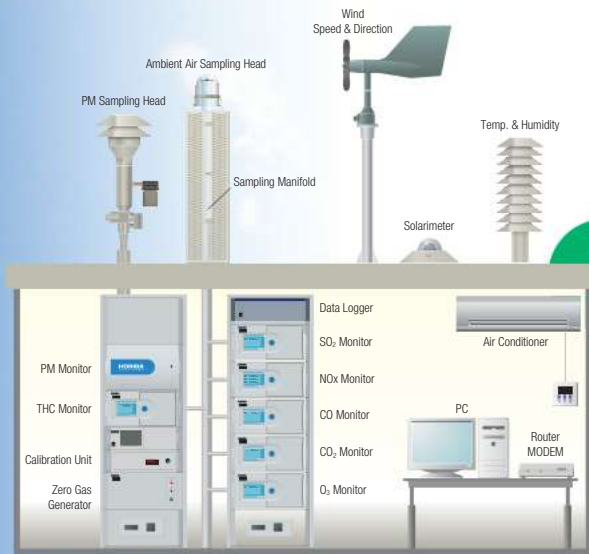

Mobile / Fixed Monitoring Stations

The measured data can be remotely monitored and exported in various formats to the local/central authorities. The data can be published via the Internet for easy public access to raise awareness on current air pollution levels. This way, the public can prevent outdoor activities and reduce health impacts during heavy polluted days.


**Overview** The Air Quality Monitoring System (AQMS) is a facility to measure wind speed, direction, other weather parameters, concentration of air pollutants (such as SO<sub>2</sub>, NO<sub>x</sub>, CO, O<sub>3</sub>, THC etc), and particulate matters continuously all year round. Mobile AQMS can also be customized to monitor multiple sites via one system.

### Main Products

|               |          |          |
|---------------|----------|----------|
| AP-370 series | APDA-371 | APMC-370 |
| PX-375        | APDA-372 |          |

Understanding the life cycle of water is essential for us to live on the earth. Water will be consumed, polluted, treated, discharged, and then returned as our water resource again through various sources such as rain. It is especially critical to monitor the waste water discharge from a factory to protect our water resources.

## WQMS as the guardian to protect nature life source "Water"

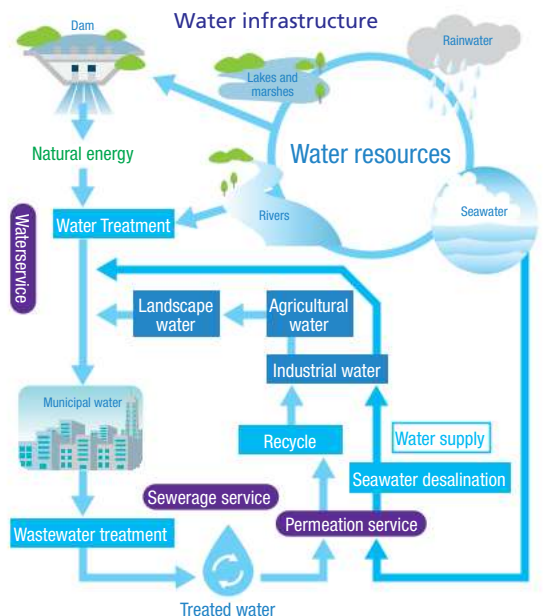

**Overview** Water Quality Monitoring System (WQMS) is a facility to measure pollutants such as Chemical Oxygen Demand (COD), Total Phosphates (TP), Total Nitrogen (TN), etc. The required parameters are customized according to the type of factory and discharge regulations.

### Main Products

|              |          |          |
|--------------|----------|----------|
| H-1 series   | OPSA-150 | TPNA-500 |
| 48/96 series | CODA-500 |          |

# Other analyzers



## Infrared Thermometer IT-480 series

### Temperature

This infrared thermometer with industry leading\* accuracy can be used for the temperature control of production lines, devices and plants in various factories. It can also be used for a wide range of other purposes, including research and development and experiments, by connecting to a Windows® personal computer.

\*Internal investigation in 2020



## Gloss Checker IG series

### Gloss

This gloss checker provides easy measurement of surface gloss levels, by quantifying the surface appearance visual inspection. Ideal for automotive coating inspections, floor waxing coating inspections, etc.



## Environmental Radiation Monitor PA series

### $\gamma$ (gamma) rays

This is a portable monitor that allows easy and accurate measurement of gamma rays. It is equipped with data communication function, enabling automatic recording of measured data and dose mapping, in linkage with a smartphone or computer.



## Oil Content Analyzer OCMA-500 series

### Oil content

This analyzer measures oil content in water or seawater, residual oil on machine parts, and oil content in soil, etc. Easy to operate, this analyzer delivers speedy measurements.



## Multi Parameter Water Quality Checker U-50 series

pH / Dissolved oxygen / Electrical conductivity / Turbidity / Oxidation-reduction potential / Salt content / Specific gravity of seawater / Total dissolved solid quantity / Water temperature / Water depth / GPS

Many items can be measured simultaneously with one probe. This portable checker is best for outdoor use, such as measurements of river water, lake water, well water, and ground water.

■ Measurement items  
■ Features




The HORIBA Group adopts IMS (Integrated Management System) which integrates Quality Management System ISO9001, Environmental Management System ISO14001, and Occupational Health and Safety Management System ISO45001. We have now integrated Business Continuity Management System ISO22301 in order to provide our products and services in a stable manner, even in emergencies.



**Please read the operation manual before using this product to assure safe and proper handling of the product.**

- The specifications, appearance or other aspects of products in this catalog are subject to change without notice.
- Please contact us with enquiries concerning further details on the products in this catalog.
- The color of the actual products may differ from the color pictured in this catalog due to printing limitations.
- It is strictly forbidden to copy the content of this catalog in part or in full.
- The screen displays shown on products in this catalog have been inserted into the photographs through compositing.
- All brand names, product names and service names in this catalog are trademarks or registered trademarks of their respective companies.

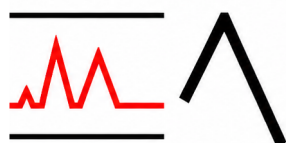

## Equipamientos Analíticos S.A

DESDE 1989 | BRINDANDO SOLUCIONES